

10X18.5CM 车位正上方1.2cm

STOCKADE SHELTER TENT SINGLE

HOW TO SET UP YOU STRETCHER TENT

1. Select a sheltered site, clear a level area of all stones, twigs, etc. Remove the stretcher tent from the carry bag. Stand the compressed stretcher tent on its feet facing the desired position. Slowly expand each leg making sure the scissor-action struts open evenly and smoothly. It will be necessary to move from end to end during the opening of the stretcher tent. If the strut seems stiff, do not force the stretcher tent, check and make sure that you are opening the stretcher tent square and evenly. Please take care the feet are not catching on the ground preventing a smooth opening operation.

HELPFUL HINT

Helpful Hint: It is not necessary at any stage of assembly to apply more than a small force on the frame. If a small force is not sufficient to carry out each described step, then re-align and try again. To prevent damage it is important not to drop the Easy Fold Stretcher Tent.

2. When the stretcher tent base is fully expanded, take the two longest fibreglass poles from the carry bag and assemble all poles making sure each pole junction is securely connected. Slide each pole through the sleeves that run diagonally across the top of the tent. Fasten the tie point over the poles at the top of tent. Place the ends of the poles onto webbing pockets located on the four corners. The inner tent will stand up during this action. Now select the two short fibreglass poles with spigot end tips and place between the eyelets located on either end of the inner tent.

3. Remove the fly from the carry bag and place over the roof frame of the Stretcher Tent. Secure the fly to the Stretcher Tent by attaching all the Velcro points on the underside of the fly sheet.

4. Ensure all the peg points are utilised and all the guy ropes are attached firmly.

To pack away, simply reverse the above process.

HINTS AND TIPS

- Ensure that the inside of unit is free from dirt or debris before packing up.
- Wipe clean the base of the tent before packing.
- Never pack a wet tent or shelter, ensure it is clean and dry before storing.

NO ASSEMBLY NEEDED, READY IN SECONDS




STEP 1



STEP 2



STEP 3

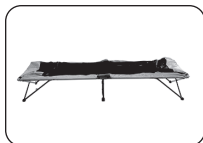

STEP 4



STEP 5



FLY SHEET

FABRIC: Polyester

FRAME: Steel with plastic componentry



Designed by:
Adventure Trading
Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA
P: 1300 362 921

OZtrail® is a registered
trademark of Adventure
Trading Australia Pty Ltd
www.oztrail.com.au
Made in China