WARRANTY

This product is guaranteed to be free from defects in workmanship & materials for a period of 12 months from the date of purchase. The product will be replaced or refunded for a major failure. The product will be repaired or replaced at our discretion, should the product fail to be of an acceptable quality and failure is not considered a major fault.

Warranty will not apply if the product (a) us damaged through misuse (including failure to maintain), neglect, accident or ordinary wear and tear (including rust, corrosion, normal fading, weathering, staining, discolouration, scratching or chipping); (b) is damaged through exposure to heat; (c) is used commercially; (d) has not been used or installed in accordance with any applicable instructions; or (e) has been modified, repaired or tampered with by the purchaser of an unauthorised service person.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement of refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of an acceptable quality and the failure does not amount to a major failure.

To claim under this warranty, please take this product to the Anaconda where you purchased it. You will need you receipt of other proof of purchase. Additional information may be requested of you to process your claim. Should you not be able to provide proof of purchase with a receipt; a bank or credit statement, and identification showing your name, address and signature may be required to process your claim.

Any expense relating to the return of the product to the store will be at the expense of the customer. For online purchases, please contact us to arrange where and how to return the product.

To obtain compensation, you will need to provide documentary evidence of the loss or damages suffered, and documentary evidence that such loss or damage was reasonably foreseeable consequence of a failure. Such evidence may include photographs, statutory declarations, receipts, reports (eg. from your doctor), depending on the loss or damage.

The benefits given by this warranty are in addition to other rights and remedies under the Australian Consumer Law in relation to the goods and services to which this warranty relates.

Warranty excludes consumable replacement/serviceable parts (where applicable to the product) as detailed in the product instruction manual or packaging which are available for purchase.

This warranty is provided by: Anaconda Group Pty Ltd (ABN 53 955 173 782)

Level 4, 111 Cecil Street, South Melbourne, VIC, 3205

www.anacondastores.com Ph: 1300 558 990



CLIP FAN 6"

OWNERS MANUAL



MODEL L17-22CL19

IMPORTANT SAFETY INSTRUCTIONS

- PLEASE READ ALL INSTRUCTIONS BEFORE USING THE FAN
- DON'T PUT YOUR FINGER IN THE FAN GRILLE WHEN OPERATING
- DON'T OPEN THE FRONT OR BACK COVER OF THE FAN
- KEEP THE FAN AWAY FROM HEAT SOURCES OR FIRE
- KEEP THE FAN AWAY FROM MOISTURE AND LIQUIDS
- PLEASE USE CHARGE CABLE THAT'S SUPPLIED WITH THE FAN
- USE ONLY UNDER ADULT SUPERVISION
- PLEASE RECHARGE THE FAN AT LEAST EVERY THREE MONTHS


OPERATION INSTRUCTIONS

- Please make sure there is no visible damage on the fan or charge cable before use
- Locate the fan switch on the back of the fan and press to switch on and change betweeen High/Medium/Low modes and then turn off
- 3. Turn off the fan when the battery runs out or while charging
- Locate the light switch on the back of the fan and press to switch on and change between High/Medium/Low modes and then turn off
- 5. Charge the fan with the supplied USB-C charge cable, the battery level indicator (25% / 50% / 75% / 100%) will show when the battery is fully charged and the operation indicator will stop flashing

PRODUCT FEATURES

- 1. Powerfull brushless motor drives a lightweight PC fan blade
- 2. Constructed from durable and hardwearing ABS plastic
- 3. Three gear fan speeds: High/Medium/Low
- 4. Three light modes: High/Medium/Low
- 5. 3.7V 2400mA Li-ion rechargeable battery
- 6. Fan run time 2.5-5hrs, recharge time 3-4hrs
- 7. Multipule ways of use: strong clip, magnetic base, hanging hook or stand on a flat surface

FAN FEATURES

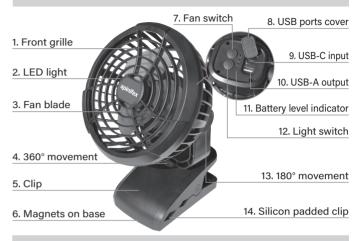

IMPORTANT BATTERY INSTRUCTIONS

- 1. Please charge the battery for 4hrs before using for the first time
- 2. It's recommended to charge the battery at least every three months to prevent the battery depleting when stored for long periods
- 3. Store away from high temperatures or flammable & explosive goods

SPECIFICATIONS	
INPUT	5V/2A USB-C
OUTPUT	5V/1A USB-A
OUTPUT POWER	7W max
LIGHT OUTPUT	3W
BATTERY	3.7V 2400mA Li-ion rechargeable battery
USB-C CHARGE CABLE	1m
RUN TIME	2.5 - 5hrs
CHARGE TIME	3 - 4hrs
FAN SPEED CONTROL	3x gear speed regulation