

YONDER

OUTDOOR CO.



IMPORTANT

Please read instructions carefully. Familiarise yourself with the product before use. Keep these instructions for future reference.

ARGYLE BELL TENT

INSTRUCTION MANUAL



Contents

 
 
 
- 3 **PRODUCT AND PART LISTING**
- 4 **IMPORTANT SAFETY INSTRUCTIONS**
- 5 **CARE INSTRUCTIONS**
- 6 **TENT ASSEMBLY AND PACK DOWN**

Product and Part Listing

PART NUMBER	DESCRIPTION	QUANTITY INCLUDED
A	Bag	1
B	Tent	1
C	Ground Pegs	20
D	Guy Ropes with Sliders	10
E	Main Pole	1
F	Door Pole	1

OVERALL DIMENSIONS	OVERALL WEIGHT (KG)
4(DIA) X 2.5(H) M*	18kg

*Fully extended with guy ropes

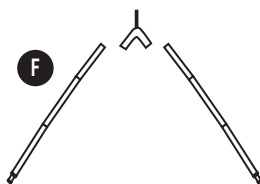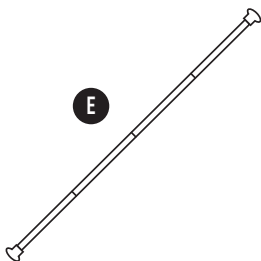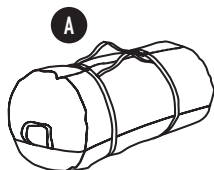

Important Safety Instructions

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC AT ALL TIMES.

EXTREME CAUTION:

NEVER USE ANY FUEL BURNING OXYGEN CONSUMING DEVICES OR ANY DEVICES THAT PRODUCE ANY FUMES, INCLUDING STOVES, LANTERNS, CANDLES OR HEATERS IN OR AROUND YOUR TENT. THIS COULD RESULT IN CARBON MONOXIDE POISONING, INJURY AND/OR DEATH.

DO NOT:

- Do not pitch tent near an open flame.
- Do not leave campfires unattended.
- Do not allow children or adults to use lighted candles, matches or other flame sources in or near tents.
- Do not use heating, lighting or cooking equipment with open flames in or near tents.
- Do not spray with insecticide.

DO:

- Always extinguish campfire before leaving area.
- Exercise care when using electricity and lighting in and near tents.
- Disassemble and store tent properly after camping to ensure the tent's longevity.
- Always use a hammer/mallet when driving stakes into the ground.
- Keep exits clear at all times.

IN THE EVENT OF A FIRE

Inside the tent - leave all your belongings and evacuate through exit door.

VENTILATION

This tent must be properly ventilated in all weather conditions. For example, snow could obstruct airflow and cause asphyxiation unless cleared frequently. NEVER leave children unattended inside a tent. Anchor your tent securely to provide additional security from changing climatic conditions.

FAILURE TO FOLLOW THESE WARNINGS COULD CAUSE ASPHYXIATION, CARBON MONOXIDE POISONING, AND DEATH OR SERIOUS AND PERMANENT INJURIES.

This can be achieved by allowing airflow through entry door and windows on sides of the tent. All windows and entry door have a mesh lining allowing airflow. Canopy is vented and mesh lined to assist further with airflow.

CONDENSATION: is the build-up of moisture on the inside of tent due to a temperature difference between the inside and outside of your tent. Condensation occurs mostly when the conditions are cold, rainy, or humid, although it can occur at any time. The best way to minimize condensation is to increase the ventilation within your tent. The best way to minimize condensation in your tent is to increase ventilation by leaving the door open as much as possible.

Care Instructions

MATERIALS:

Polyester/Cotton, PVC, Polyester, Steel.

CARE INSTRUCTIONS:

Wipe clean with a damp cloth only. Allow to dry before storing. To prevent mould and mildew, always ensure the tent is completely dry before storing. Do not fold or store when wet or damp. Always store in a well ventilated area.

This tent is not intended for use as a permanent structure.

Location for setting up your tent

Carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other objective hazards when choosing a campsite. This reduces the risk of loss or injury to the tent or occupants.

Anchor your tent properly at all times to reduce the risk of loss or injury to the tent or occupants.


Tent Assembly

READ ALL INSTRUCTIONS PRIOR TO USE.


A minimum of two people are required to set up and pack down this tent. We recommend setting up this product after purchase to ensure all parts are present and to familiarise yourself with the set up/ pack down process.

NOTE: Unpack in an open area ensuring there are no sharp objects in the vicinity as they may damage the fabric. Avoid setting up on concrete or hard surfaces as abrasion can damage the fabric.


- 1 Assemble the poles.

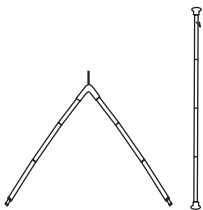

- 2 Lay the tent out flat ensuring the door is facing desired position. Tension the floor in all directions and fasten with ground pegs.

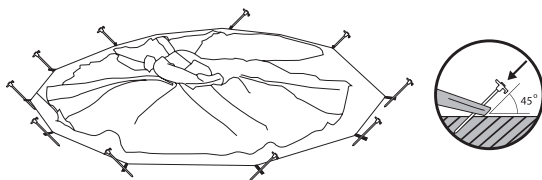


- 3 Set the main pole inside the tent as shown.

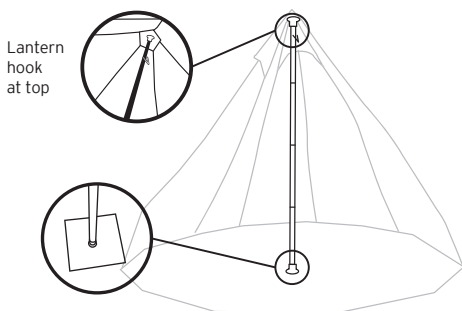


Tent Assembly

- 4 Set the door pole inside the tent as shown.

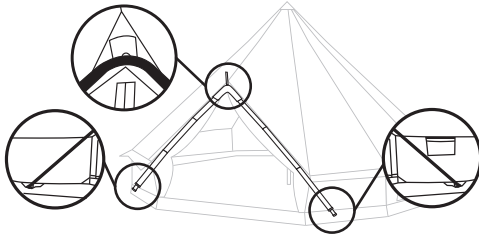

- 5 Stake down all guy ropes. Tension the ropes equally.

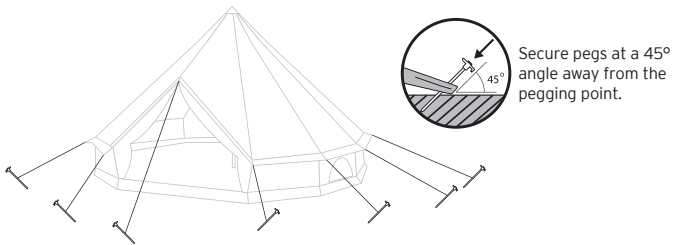

Pack Down

Make sure the tent is dry before packing. Remove any loose dirt or debris from the tent using a soft brush.

Simply reverse the set up instructions to pack down this tent.

Pack the poles into the pole bag and use the carry bag as size guide for folding and rolling up the tent.



ANACONDA GROUP PTY LTD
LEVEL 6, 111 CECIL STREET, SOUTH MELBOURNE VIC 3205
www.anaconda.com.au
PHONE: 1300 558 990
Designed in Australia. Made in China.

