




## REDLINE 2P PITCHING INSTRUCTIONS

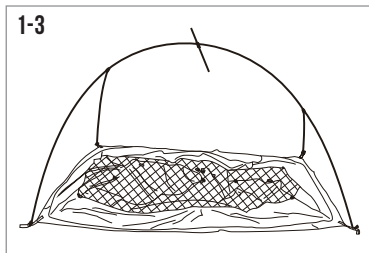

1. Choose an area free from sticks, rocks and roots. Avoid camping anywhere with dangerous branches overhead, or at the base of a cliff.
2. Unpack and separate out the tent components.
3. Insert pole tips into the grommet at the head end of the inner tent, then at the foot end of the inner tent.

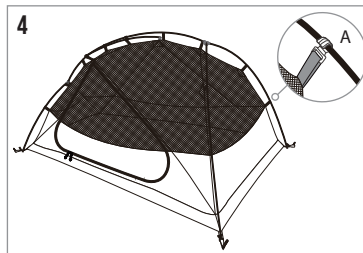

4. Attach the inner tent to the poles with the pole clips (A), then secure the corner anchors by hammering pegs into the ground with a hammer (or other hard object). Finally, secure the ends of the top cross-bar pole into the plastic holes on the inner tent.

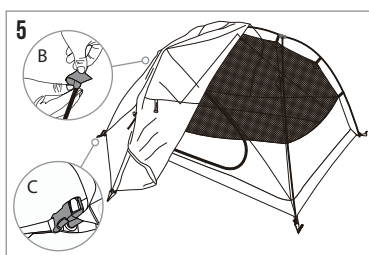

5. Secure the fly to the poles with the internal Velcro tabs (B) and buckle at the base (C) on all corners. Pull firmly on the adjustable corner anchors – proper tension ensures maximum water shedding and wind resistance.



6. Stake out the vestibule anchors and pull firmly on the webbing to ensure proper tension in the fly.
7. Guy ropes can be secured for extra stability in high winds for optimal performance.

### General Tips & Notes

- Set up your tent at home to ensure you are familiar with it.
- Choose a level campsite with good drainage.
- Clear away sharp or protruding objects that may damage the tent floor.
- Never let the poles just snap together, as it can damage the pole ends.
- Be careful with chemicals, such as stove fuels.
- Where possible avoid prolonged exposure to direct sunlight.

### Cleaning Your Tent

- When required after use, clean and dry your tent to prevent mildew.
- Wash with a mild soap or detergent (preferably biodegradable) and water, with the tent assembled.
- Rinse the tent well, wipe it with a towel, and then let it air dry before packing and storing.

### Storing Your Tent

- Store your tent in a cool, dry place. Do not store directly on concrete.

### Repairing Your Tent

- A repair kit is included in the packaging with your tent.